



DDS561 è un controller per in corrente costante a quattro canali di uscita.

Questo modulo è indicato per applicazioni in quadri elettrici su montaggio barra din, tramite apposito blocchetto per DIN oppure può essere installato all'interno di prodotti. Si controlla con DMX/RDM/stand alone con show preprogrammati oppure DALI.

Sono possibili al massimo 12 o 15 led per canale dipendentemente dalla Vf del led. i led sono riferiti ad un unico comune positivo, per le quattro uscite, mentre le uscite sono verso massa.

Il dispositivo è protetto da sovraccarico o guasto con fusibile non ripristinabile, è disponibile un ingresso per sonda termica NTC da collegare sui led.

DDS561 it is constant current, 4 channel this unit can supply up to 12 led in series 1W each or 15 led depending on Forward voltage.

This module can work in several mode DMX/RDM/stand-Alone/ and DALI.

The constant current is made by hysteretic control to guarantee the best light dimmering performance.

All output are positive common, and ground control.

Din Bar mounting accessories available.

Technical Specifications Constant current:

INPUT:

Power supply V= 100-265 VAC wide range
Current mA = 600mA@110v/300mA@230v
THD = 14,6 %

Frequency = 47-63 Hz

Power Factor = 0,94 @ Full load

OUTPUT:

Voltage max = 50Vdc

Current max per channel = 350mA

Total Power Out = 60W

Maximum Channel = 4

Maximum led per Channel = 12 /(15 if Vfled < 3Vdc)

Short Circuit Protection all 4 output protection

Common positive for led connection

Hysteretic Frequency out 500Khz

Hysteretic Constant Current

4 channel output

LED Thermal protection external NTC

Internal Thermal protection NTC

CONTROL MODE:

DMX standard USITT512

DMX input optoisolated

RDM 2.0 Compatible

DALI

ENVIRONMENT:

operating temperature: -10° to +75°C

Storage temperature: Tst -20° to +85°

Case temperature: Tc +70°

Relative humidity: RH 80%

CASE:

Metal case black painted


SIZE mm = 310x36x50

OEM module without case available

Overled is a brand of DDS Elettronica S.r.l. - Via Nicolo Biondo 171 - 41100 Modena Italy - www.overled.com
C.F. partita Iva It02275360366 - capitale i. V. 50.000,00euro - telefono +39.059.822993 fax +39.059.823573

Power supply and DMX looping

Alimentazione e DMX collegamenti multipli

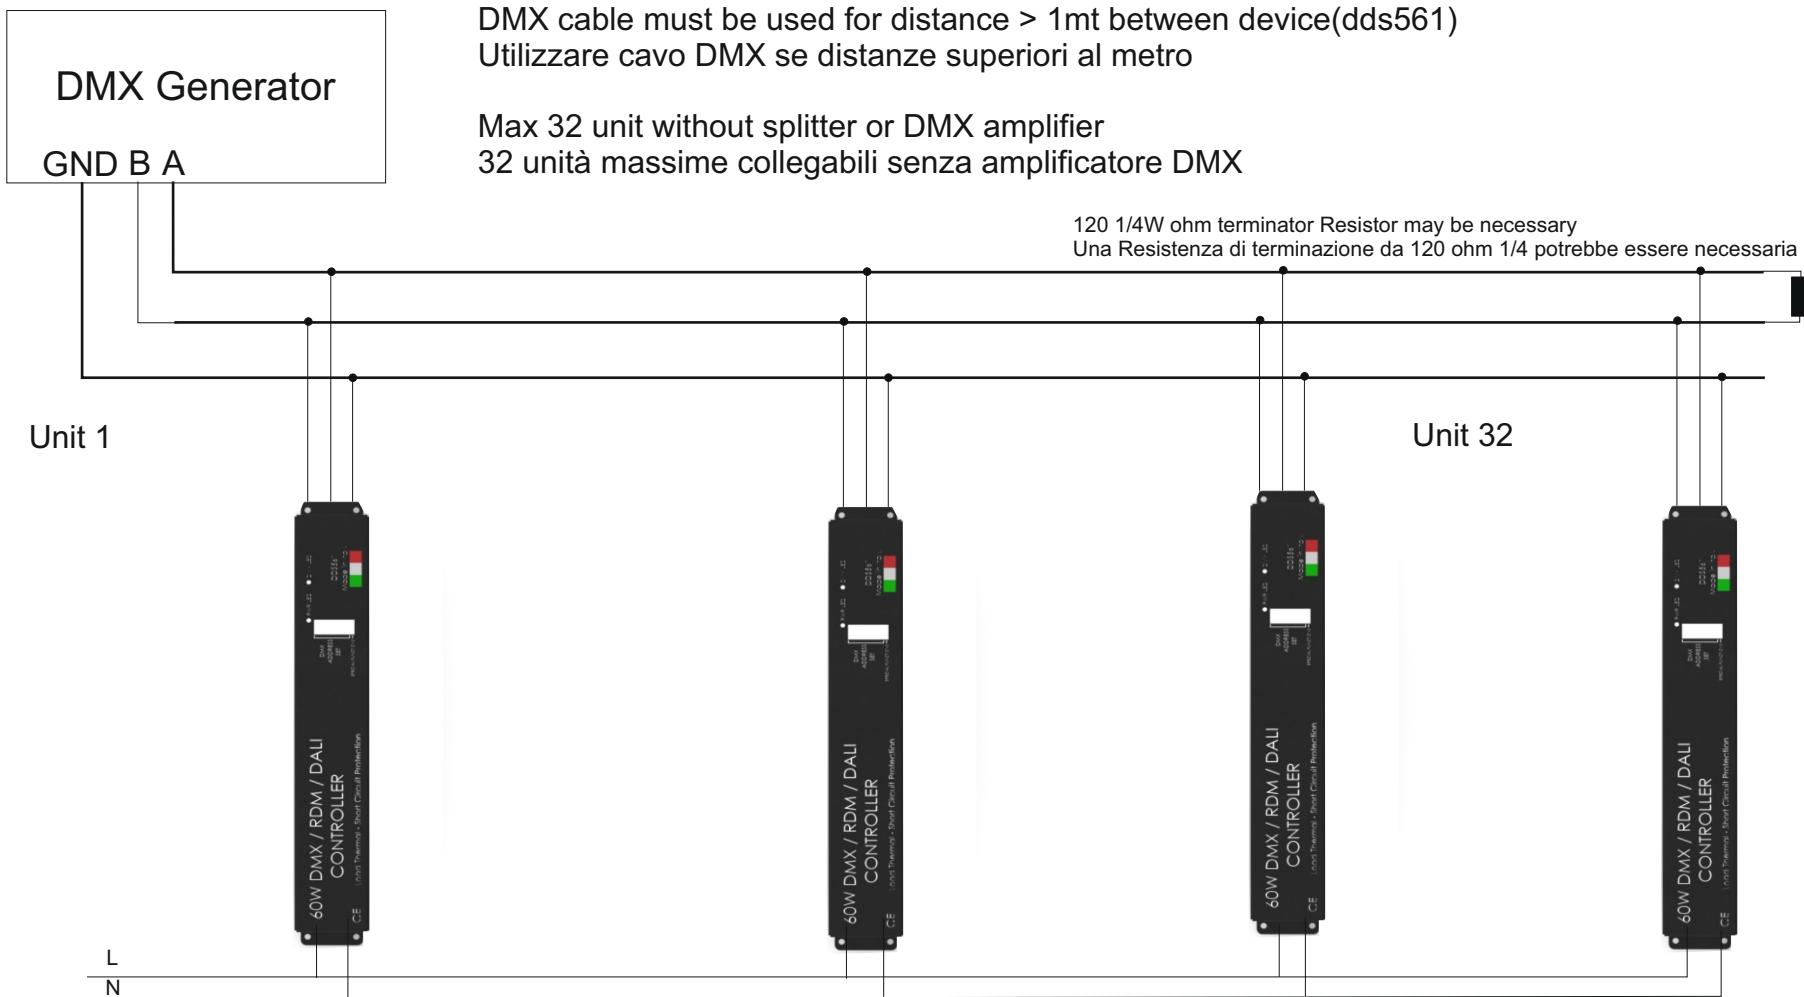

Max 16 Amp,MAX wire section 2.5mm
Massimo 16 A, sezione cavo massima 2.5mm

Overled

DDS .561A

DMX specification standard

Specifiche standard DMX

DMX512

Developed by the Engineering Commission of United States Institute for Theatre Technology (USITT), the standard was created in 1986, with subsequent revisions in 1990 leading to USITT DMX512/1990.DMX512-A In 1998 the Entertainment Services and Technology Association(ESTA) began a revision process to develop the standard as an ANSI standard. The resulting revised standard, known officially as "Entertainment Technology – USITT DMX512-A – Asynchronous Serial Digital Data Transmission Standard for Controlling Lighting Equipment and Accessories", was approved by the American National Standards Institute (ANSI) in November 2004. This current standard is also known as"E1.11, USITT DMX512-A", or just "DMX512-A", and is maintained by ESTA.

Network topology

ADMX512 network employs a multi-drop bus topology with nodes strung together in what is commonly called a daisy chain. Anetwork consists of a single DMX512 controller – which is the sole master of the network – and one or more slave devices. For example, a lighting console is frequently employed as the controller for a network of slave devices such as dimmers, fog machines and intelligent moving lights.Each slave device has a DMX512 "IN" connector and, in many case, a DMX512 "OUT" connector (sometimes marked "THRU") as well. The controller, which has only an OUT connector, is connected via a DMX512 cable to the IN connector of the first slave. Asecond cable then links the OUTor THRU connector of the first slave to the IN connector of the next slave in the chain, and so on. The final, empty, OUTor THRU connector ofthe last slave on the daisy chain should have a terminator plugged into it. Aterminator is a stand-alone male connector with a built-in resistor. Theresistor – typically 120 Oto match the cable characteristic impedance, is connected across the primary data signal pair. If a secondary data pair is used, then another termination resistor is connected across it as well. Although simple systems, i.e., systems having few devices and short cableruns, may work reliably without a terminator, it is considered good practice always to use a terminator at the end of the daisy chain. Some DMXdevices have built-in terminators that can be manually activated with a mechanical switch or by software, or by automatically sensing the absence of a connected cable.Each DMX network is called a "DMX universe". Large control desks (operator consoles) may have the capacity to control multiple universes, with an OUTconnector provided for each universe.

Electrical

DMX512 data are sent using EIA-485 voltage levels. However, quoting from E1.11, "The electrical specifications of this Standard are those of EIA-485-A, except where specifically stated in this document. Where a conflict between EIA-485-A and this document exists, this document is controlling as far as this Standard is concerned."DMX512 is a bus network no more than 1200 meters long, with not more than 32 devices on a single bus. If more than 32 devices need to communicate, the network can be expanded across parallel buses using DMX splitters. Network wiring consists of a shielded twisted pair, with a characteristic impedance of 120 Ohms, with a termination resistor at the end of the cable furthest from the controller to absorb signal reflections.

Connectors

DMX512 1990 specifies that where connectors are used, the data link shall use five-pin XLR style electrical connectors (XLR-5), with female connectors used on transmitting (OUT) ports and male connectors on receiving ports. DMX512-A (E1.11) requires the use of an XLR-5 connector,unless there is insufficient physical space on the device, in which case an XLR-5 adapter shall be supplied. DMX512-A(E1.11-2008) allows the use of eight-pin modular (RJ-45) connectors for fixed installations where regular plugging and unplugging of equipment is not required. Some DMX512 equipment manufacturers employ non-compliant connectors and pinouts; the most common of these is the three-pin XLR connector, since theelectrical specification currently only defines a purpose for a single wire pair. There is risk of equipment damage if a novice unfamiliar with lighting technology accidentally plugs XLR 3-pin DMX into an audio device, since the DMX signal voltages are much higher than what audio equipment normally uses. Also, devices are sometimes fitted with four-pin connectors when both communications and power are sent through a common cable.

The RJ-45 connector pinout matches the conductor pairing scheme used by Category 5(Cat5) twisted pair patch cables. The avoidance of pins 4 and 5 helps to prevent equipment damage, if the cabling is accidentally plugged into a single-line public switched telephone network phone jack.Cabling for DMX512 was removed from the standard and a separate cabling standards project was started in 2004. Two cabling standards have been developed, one for portable DMX512 cables (ANSI E1.27-1 - 2006) and one for permanent installations (draft standard BSR E1.27-2). This resolved issues arising from the differences in requirements for cables used in touring shows versus those used for permanent infrastructure.The electrical characteristics of DMX512 cable are specified in terms of impedance and capacitance, although there are often mechanical and other considerations that must be considered as well. Cable types that are appropriate for DMX512 usage will have a nominal characteristic impedance of 120 ohms. Cat5 cable, commonly used for networking and telecommunications, has been tested by ESTA for use with DMX512A.Also, cables designed for EIA485 typically meet the DMX512 electrical specifications. Conversely, microphone and line level audio cables lack the requisite electrical characteristics and thus are not suitable for DMX512 cabling. The significantly lower impedance and higher capacitance of these cables distort the DMX512 digital waveforms, which in turn can cause irregular operation or intermittent errors that are difficult to identify and correct.


XLR-5 pinout

1. Signal Common
2. Data 1- (Primary Data Link)
3. Data 1+ (Primary Data Link)
4. Data 2- (Optional Secondary Data Link)
5. Data 2+ (Optional Secondary Data Link)



RJ-45 pinout

1. Data 1+
2. Data 1-
3. Data 2+
4. Not Assigned
5. Not Assigned
6. Data 2-
7. Signal Common (0 V) for Data 1
8. Signal Common (0 V) for Data 2

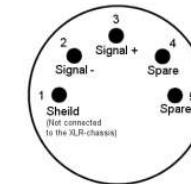

DDS561A DMX MODE

UTILIZZO DEL CONTROLLER IN DMX

Modalità DMX

Il modulo DDS561A entra in questa modalità appena riceve segnale DMX in modo prioritario su tutte le altre funzionalità, ed è quindi necessario l'uso di un generatore DMX compatibile allo standard per generare i 4 canali utilizzati dalla scheda. A seconda della personalità scelta prima tramite RDM si decide il numero di canali utilizzati dal modulo in caso di personalità 4 canali questi saranno 1,2,3,4. La assegnazione del canale DMX quindi l'indirizzamento nella rete DMX avviene in modalità RDM o con autoapprendimento, dove dalla consolle DMX si invia il canale di riferimento voluto con valore al 100%, per esempio il canale 6, poi si preme DMX set sul modulo DDS561a (vedi pulsante a bordo scheda nel connettore posizione 13, inserire cacciavite per la selezione) ed il led rosso(nella morsettiera posizione 19) si accende e spegne dopo qualche secondo a conferma della avvenuta memorizzazione dell'indirizzo DMX, il canale assunto per primo è il canale 1, all'indirizzo DMX 6 poi in sequenza 2,3,4(7,8,9,). Assicurarsi che il generatore DMX non generi altri canali diversi dal numero da autoapprendere o questi potranno essere assunti al posto di quello voluto. Controllare la corretta connessione alla rete DMX dei segnali A e B in caso sia invertito o non corretta il led di DMX non lampeggia ma rimane acceso fisso, indicando appunto errore di connessione. Nota in caso di assenza DMX il modulo assume modalità manuale.

DMX MODE


DMX operation Mode

DMX generator it is necessary in this operating mode , DDS561 require 4 channels from DMX streaming.

To set DMX address connect the DMX generator,to DDS561A wire A and B correctly, red led in position 19 will blink correctly if DMX is connected, set DMX generator to the max value on the desired channel, (for example channel 6 = 255) then push an hold DMX set button on the box in connector position 13, the on board red led stay on 3 second then blink to indicate the setting is complete, be careful the signal A and B is properly connected to DDS561A. The number of channel used in DMX are 4, in this example the channel 1 in the controller is channel 6 in DMX streaming.

If no DMX available the module go in stand alone operations.

Output Connector view

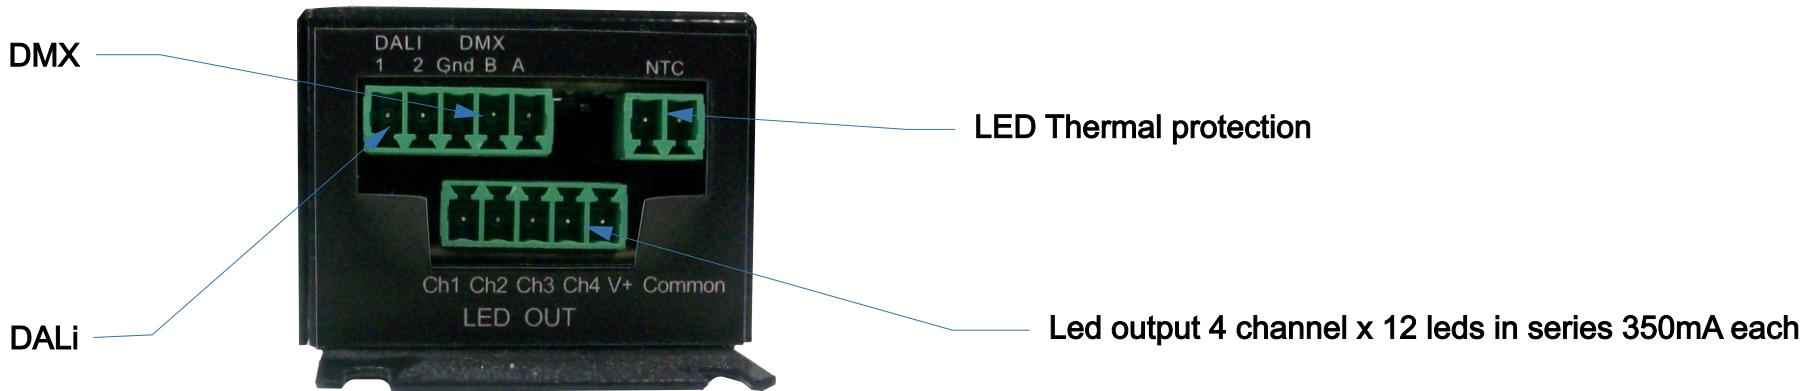

RDM Current setting

RDM impostazione della corrente

- Alimentazione al dispositivo
- Allacciare segnale DMX ai poli (A+) e (B-)
- Predisporre il collegamento a PC attraverso l'interfaccia ECCO e lanciare l'omonimo programma di gestione
- Alimentare la scheda, quindi lanciare la ricerca rapida dei componenti dall'Ecco col comando Discovery tenendo contemporaneamente premuto il tasto Shift (rilasciarlo appena lanciato il comando)
- Nella finestra a sinistra del pannello di visualizzazione Ecco appare la riga relativa al componente identificato
- Selezionare il componente col mouse e quindi appare la videata relativa al componente selezionato
- Premere il TASTO setup, appare la schermata numero 2, lo slider 002 identifica la quantità di corrente sulle uscite:

| | |
|----------------|--------------------|
| Slider 2 | Valore in corrente |
| Valore 193-255 | corrente = 650mA |
| Valore 129-192 | corrente = 550mA |
| Valore 65-128 | corrente = 450mA |
| Valore 0-64 | corrente = 350mA |


Lo slider 001 deve rimanere a 255.

- Connect Ecco RDM signal to the device DMX input , A and B or + and - (A+) (B-)
- Run Ecco or Esuite in PC /MAC
- Power device On (DDS674)
- USE Discovery button on the screen of your pc, to get all devices connected on the DMX line
- In to the left window a complete list of device appear
- Select with the mouse one of device on the list
- Click on setup button to set current for all 4 outputs
- Select the current by slider 002 as in this table:


| | |
|---------------|------------------|
| Slider 2 | Current output |
| Value 193-255 | curr.out = 650mA |
| Value 129-192 | curr.out = 550mA |
| Value 65-128 | curr.out = 450mA |
| Value 0-64 | curr.out = 350mA |

Slider 001 must stay at 255.

Screenshot 1

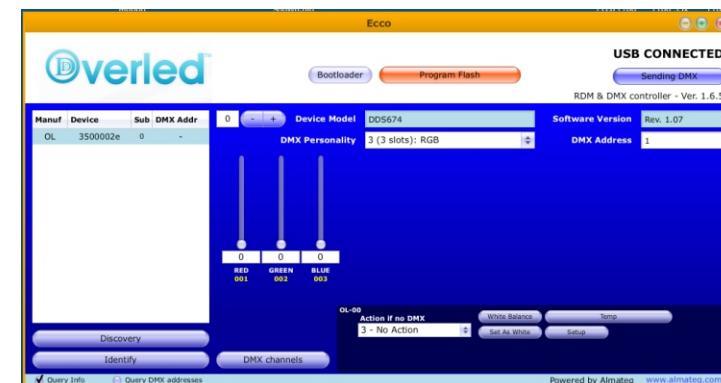

Screenshot 2

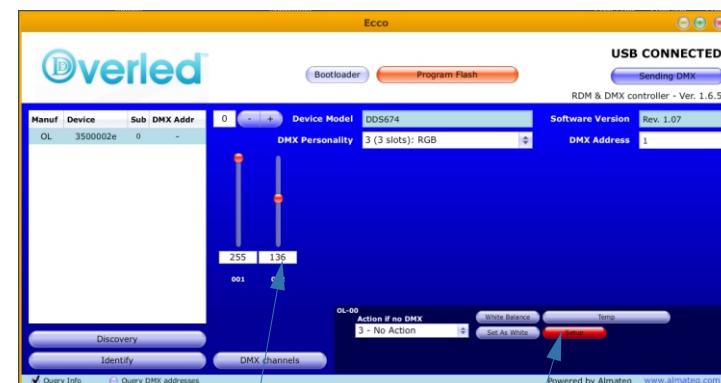

Current slider

Setup


DDS .561A

DDS elettronica srl si riserva il diritto di effettuare cambiamenti sulle informazioni contenute in questa documentazione senza preavviso.

DDS elettronica srl reserve the right to change information in the data sheet without notice.



Power supply Connector view

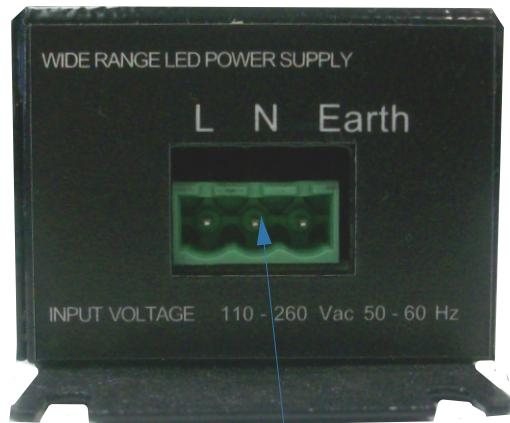


Main power supply 100-230VAC 50/60 Hz

RDM interface operating mode

Interfaccia RDM modo operativo

- Alimentazione al dispositivo
 - Allacciare segnale DMX ai poli (A+) e (B-)
 - Predisporre il collegamento a PC attraverso l'interfaccia ECCO e lanciare l'omonimo programma di gestione
 - Alimentare la scheda, quindi lanciare la ricerca rapida dei componenti dall'Ecco col comando Discovery tenendo contemporaneamente premuto il tasto Shift (rilasciarlo appena lanciato il comando)
 - Nella finestra a sinistra del pannello di visualizzazione Ecco appare la riga relativa al componente identificato
 - Selezionare il componente col mouse e quindi appare la videata relativa al componente selezionato
 - Aprire la finestra relativa alle DMX Personality cliccando col mouse sulle frecce a destra
 - Selezionare la personalità desiderata cliccando col mouse sulla riga relativa che viene evidenziata (anche con il simbolo di "spunta" a sinistra)
 - La scheda memorizza immediatamente la nuova personalità ed è pronta per essere utilizzata
 - Spegnere l'alimentatore prima di staccare i cavi dalla scheda
- N.B. Utilizzando Ecco è poi possibile andare a programmare anche il suo indirizzo DMX (DMXAddress) o la sua azione in assenza di DMX (Action if no DMX) ecc.

- Connect Ecco RDM signal to the device DMX input , A and B or + and - (A+) (B-)
- Run Ecco or Esuite in PC / MAC
- Power device On (DDS561)
- USE Discovery button on the screen of your pc, to get all devices connected on the DMX line
- In to the left window a complete list of device appear
- Select with the mouse one of device on the list
- Click on right button on you mouse to get info from device
- Choice the personality you wanted
- Now the device have stored in memory the personality
- Same for addressing , select device you want to change Address and edit the new one in the ADDRESS window.
- Select also what the device must do if no DMX available, just click in the window "ACTION IF NO DMX"and select all available for this device.

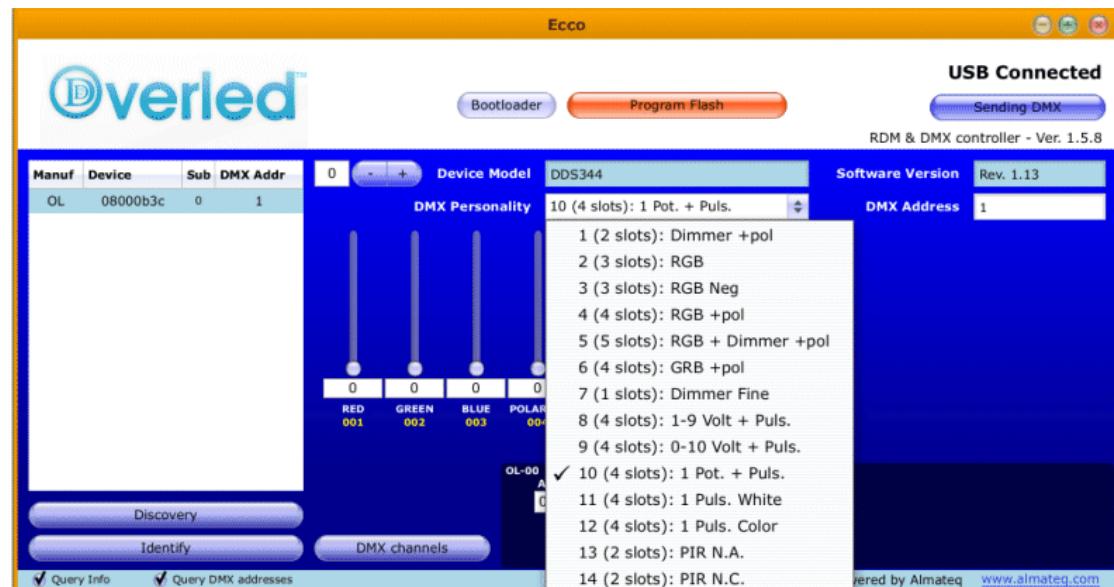

More detail on ECCO <http://www.overled.com/overledDDSDatasheet/Eccox3.pdf>

RDM personality list Elenco personalità RDM

| Personality | DMX Channel Offset |
|-------------|---|
| 1 | 1 slot, '1CH (Dimmer) |
| 2 | 1 slot, '1CH (Shutter) |
| 3 | 7 slot, 'ST7 GRBW - Speedy ST7 |
| 4 | 3 slot, 'RGB' |
| 5 | 4 slot, 'RGB + Dimmer' |
| 6 | 4 slot, 'RGBW' |
| 7 | 5 slot, 'RGBW + Dimmer' |
| 8 | 4 slot, 'GRBW' |
| 9 | 7 slot, 'ST7 RGBW - Speedy' |
| 10 | 7 slot, 'RGBW Sync Strobo Delay' GAMMA Curve |
| 11 | 8 slot, 'RGBW Sync Strobo Delay Dimmer' |
| 12 | 14 slot, 'RGBW16 Strobo Dimm. CTC Fade Frq' |
| 13 | 8 slot, 'RGB16 + Frq' |
| 14 | 4 slot, '1-9 Volt + Puls.' Input 1-9V e/o pulsanti UP/DW |
| 15 | 4 slot, '0-10 Volt + Puls.' Input 0-10V e/o switches UP/DW |
| 16 | 4 slot, '1 Pot. + Puls.' Input Potentiometer e/o switch UP/DW |
| 17 | 4 slot, '3 Pot.' 3 input potentiometer → R, G, B. |

| DMX slot (DMX used Channel per personality) | | | | | | | | | | | | | | DDS 453 output | | | |
|---|-------|---------|---------|--------|--------|---------|---------|--------|--------|-----|------|--------|--------|----------------|-------|-------|-------|
| 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | Out 1 | Out 2 | Out 3 | Out 4 |
| Dimmer | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | 0-255 | 0-255 | 0-255 | 0-255 |
| Shutter | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | 255-0 | 255-0 | 255-0 | 255-0 |
| Green | Red | Blue | White | Syncro | Strobe | Delay | nu | nu | nu | nu | nu | nu | nu | Green | Red | Blue | White |
| Red | Green | Blue | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | nu |
| Red | Green | Blue | Dimmer | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | nu |
| Red | Green | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | Dimmer | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Green | Red | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Green | Red | Blue | White |
| Red | Green | Blue | White | Syncro | Strobe | Delay | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | Syncro | Strobe | Delay | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | Strobe | Syncro | Delay | Dimmer | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red-H | Red-L | Green-H | Green-L | Blue-H | Blue-L | White-H | White-L | Strobe | Dimmer | CTC | Fade | Freq-H | Freq-L | Red | Green | Blue | White |
| Red-H | Red-L | Green-H | Green-L | Blue-H | Blue-L | Freq-H | Freq-L | nu | nu | nu | nu | nu | nu | Red | Green | Blue | nu |
| Red | Green | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |
| Red | Green | Blue | White | nu | nu | nu | nu | nu | nu | nu | nu | nu | nu | Red | Green | Blue | White |

Default personality = 16

nu not used

- Dimmer Adjust all out value 0 = off , 255 = maximum light out
- Shutter Adjust all out value 255 = off , 0 = maximum light out
- Syncro send syncro to all DMX devices
- Strobe Flash all the output 0 = all off 1-255 flash different speed
- Delay Delay output respect syncro signal
- CTC Colour Table Wheel start from > 28
- Fade smooth colour change time, 0 = none 255= maximum 2,5 sec.
- Freq H/L Flicker Free Frequency 244-1000hz for TV camera shutter

RDM Standard Specification

RDM Physical layer

The RDM protocol and the RDM physical layer were designed to be compatible with legacy equipment. All compliant legacy DMX512 receivers should be usable in mixed systems with an RDM controller (console) and RDM responders (receivers). DMX receivers and RDM responders can be used with a legacy DMX console to form a DMX512 only system. From a user's point of view the system layout is very similar to a DMX system. The controller is placed at one end of the main cable segment. The cable is run receiver to receiver in a daisy-chain fashion. RDM enabled splitters are used the same way DMX splitters would be. The far end (the non console or splitter end) of a cable segment should be terminated. RDM requires two significant topology changes compared to DMX. However, these changes are generally internal to equipment and therefore not seen by the user. First, a controller's (console's) output is terminated. Second, this termination must provide a bias to keep the line in the 'marking state' when no driver is enabled. The reason for the additional termination is that a network segment will be driven at many points along its length. Hence, either end of the segment, if unterminated, will cause reflections. ADMX console's output drivers are always enabled. The RDM protocol is designed so that except during discovery, there should never be data collisions. To assure this lack of collisions, while making possible implementation on different platforms, there are times when all line drivers are required to be disabled. If nothing more than the termination was done, the line would float to some unknown level. In that case one or more random changes might be read on the line. These random changes greatly decrease system accuracy. So the biasing of the line is required. To assure this, section 2.4.1 (Line Bias Networks) of the standard says; "The command port shall provide a means to bias the termination of the data link to a value of at least 245 mV and verified by using the test circuit described in Appendix F." The standard further states that, the biasing mean "shall be polarized such that Data+ of the data link is positive with respect to Data- the data link. The Line Biasing network shall maintain this bias when the data link is loaded with the equivalent of 32 unit loads and common mode voltage is varied over the range of +7 volts to -7 volt. The standard does not require any particular circuit for providing the basis and termination; however, the simplest method is often a passive pull apart network. Whatever method is used must be tested with the chosen driver chip to see that the design combination still meets the requirement of E1.20. Tests are given in Appendix F of the standard. These tests are for design verification and are not required as production testing. Experience has shown many EIA485 drivers designed for 5 volt operation will pass the required tests. It is not so clear that all 3.3 volt parts will pass. In either case this performance must be verified. Details of the pull apart network and the tests can be found in

Protocol

RDM packets are inserted in-between the existing DMX data packets being used to control the lighting data. The DMX 512 specification always requires that DMX packets begin with the start code. The default Start Code is 0x00(also known as the Null Start Code). By using the start code 0xCC, RDM packets can be safely inserted between DMX data packets without older non-RDM aware devices attempting to read them. The DMX 512 specification required DMX connectors to be a 5-pin XLR type, with only the first 3 pins being used (pins 4 and 5 were reserved for "future use"). Unfortunately, various manufacturers started using the final two pins for various, proprietary purposes, such as low-voltage power or proprietary talkback protocols. As a result, the decision was made to have all RDM communication on pins 2 and 3. This raises data collision concerns. The RDM standard addresses this problem by ensuring that in all cases (except discovery) only one device is authorized to be transmitting at any given time (somewhat similar to the token passing approach). Only the controller (of which there can be only one) can start an RDM exchange. Responders can speak only if spoken to. The controller will always initiate all RDM communication. All RDM devices have a unique identifier (UID) that consists of a manufacturer ID and serial number. Protocol RDM packets are inserted in-between the existing DMX data packets being used to control the lighting data. The DMX 512 specification always requires that DMX packets begin with the start code. The default Start Code is 0x00(also known as the Null Start Code). By using the start code 0xCC, RDM packets can be safely inserted between DMX data packets without older non-RDM aware devices attempting to read them.

Overled is a brand of DDS Elettronica S.r.l. - Via Niccolò Biondo 171 - 41100 Modena Italy - www.overled.com
C.F. partita Iva It02275360366 - capitale i. V. 50.000,00euro - telefono +39.059.822993 fax +39.059.823573



Ordering Code:
Constant Current DDS561



SIZE
310x36x50

Weight
0,65 Kg

 overled DDS .561A